
# (i) Crazy Iron




YAMAHA MT-07 2014-2023 ID: 3400212

## Installing:

### Left side:

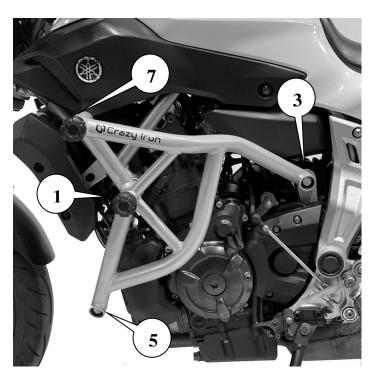


## Right side:

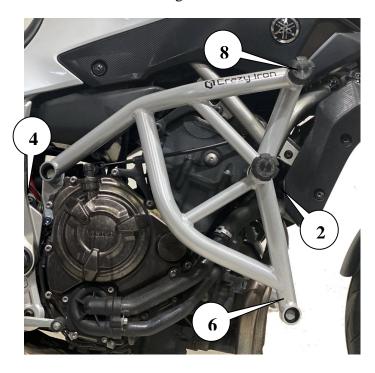





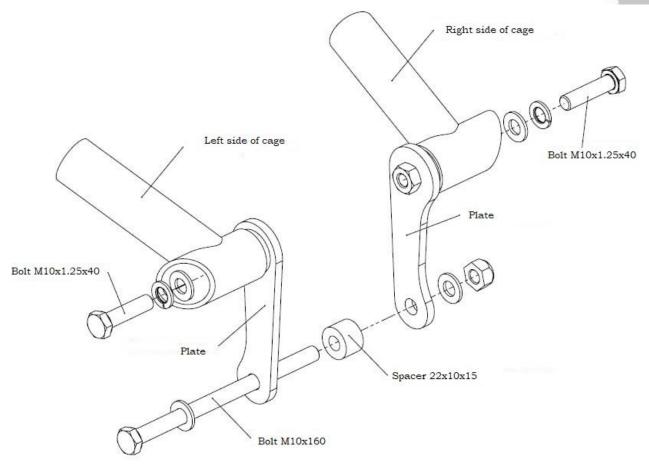

#### Comments:

- 1. Contact a specialized service, do not install the cage yourself!
- 2. Remove front sprocket cover.
- 3. Attach Plate with Bolt lightly M10x160 through the spacer 22x10x15 in point №3 Plate in point №4.
- 4. Tight lightly the nut at point № 4 to keep the mounting ears movable.
- 5. Remove original bolt in point №1
- 6. Attach left side of cage at points No1 and No2.
- 7. Screw lightly Bolt M12x1,25x60 in point №1 and screw lightly Bolt M10x1,25x40 in point №3. Correct the position of the Plate .
- 8. Remove original bolt in point №2
- 9. Attach right side of cage at points №2 и №4.
- 10. Attach right side of cage at points №2 with Bolt M12x1,25x60 lightly and in point 4 with Bolt M10x1,25x40 lightly. Correct the position of the Plate .
- 11. Install between points №5 and №6 the brace (L= 265 mm) and fix it with Bolts M10x1,25x30
- 12. Tighten the fasteners according to the table.
- 13. Install sliders in points №№1,2,7,8 and fix them with screws
- 14. Put front sprocket cover back.

Tightening torques Nm					
	Connection type				
Thread	Steel	Aluminum			
M6	10	6			
M8	24	20			
M10	48	35			
M12	56	45			

				7777	
~					
Componer №	nt table with according i	numbers in the photo:	Items		3
3	Bolt M12x1.25x60	Spring washer	Washer	Slider	Screw
1		0	0		Ommin
	Bolt M12x1.25x60	Spring washer	Washer	Slider	Screw
2		0	0		Ommin
	Bolt M10x160	Washer	Plate	Spacer 22x10x15	Bolt M10x1.25x40
3			0		00
		Plate	Washer	Nut	Bolt M10x1.25x40
4	4		0		400
	Bolt M10x1,25x30	Spring washer	Washer	Brace L=265	
5		0	0		
	Bolt M10x1,25x30	Spring washer	Washer		
6		0	0		
	Slider	Screw			
7		Ommin			
	Slider	Screw			
8		Ommin			

ACCON.