
(i) Crazy Iron




KTM Duke 125/200/390 ID: 90011/9001112/9001117

Complete set and assembly scheme:

Left side:

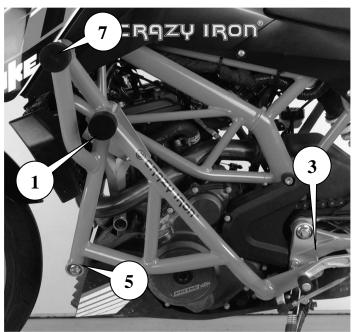



Right side:

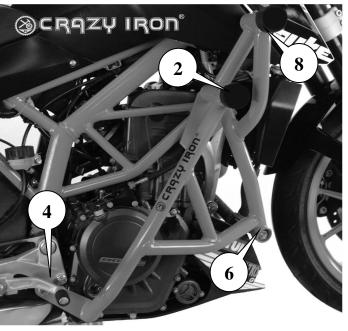

Place for mounting of plate:

Fitting of plate

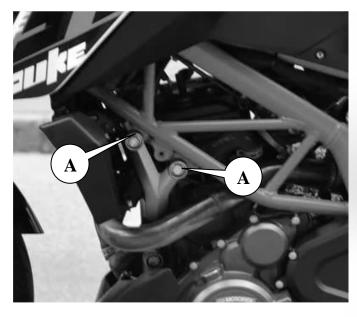

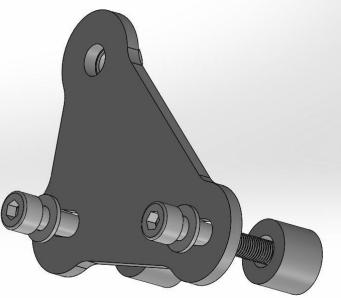

Comments:

NEVER LOOSEN ENGINE BOLTS FROM THE LEFT AND RIGHT SIDES AT THE SAME TIME!!!

In points A use bolt M8x50 for DUKE 390, M8x45 for DUKE 125/200

- 1. Contact a specialized service, do not install the cage yourself!
- 2. Remove fairing elements if they can interfere the installation of Plate
- 3. Remove original bolt from points A on the right side and attach Plate to points A with bolts and spacers and fix
- 4. Remove original bolt from points A on the left side and attach Plate to points A with bolts and spacers and fix.
- 5. Remove original bolts from point 4 on the right side of motorcycle.
- 6. Attach right side of cage to points 4 and 2 and fix with bolt M10x120 through spacer 20x10x10 in point 4 and with bolt M10x40 in point 2
- 7. Remove original bolts from point 3 on the right side of motorcycle.
- 8. Attach left side of cage to points 3 and 1 and fix with bolt M10x120 through spacer 20x10x10 in point 3 and with bolt M10x40 in point 1
- 9. Install between points No5 and No6 the brace (L= 240 mm) and fix it with Bolts M10x1,25x30
- 10. Tighten the fasteners according to the table.
- 11. Install sliders in points NoNo1,2,7,8 and fix them with screws. In case Damper Cages use Damper sliders. In case crash bars install sliders only in points 1 and 2.

Tightening torques Nm						
	Connection type					
Thread	Steel	Aluminum				
M6	10	6				
M8	24	20				
M10	48	35				
M12	56	45				

Component table with according numbers in the photo:

No	mponent table with	according numbers in the	Items			
	Plate	Bolt M8x50 or Bolt M8x45	Spring washer	Spacer 20x10x17	Slider	Screw
			0			
		Bolt M8x50 or Bolt M8x45	Spring washer	Spacer 20x10x17		Comming
1		B	olt M10x40			40
		,				
2	Plate	Bolt M8x50 or Bolt M8x45	Spring washer	Spacer 20x10x17	Slider	Screw
			G			Omm
		Bolt M8x50 or Bolt M8x45	Spring washer	Spacer 20x10x17		
			G			
		В	olt M10x40			
	Bolt M10x120	Spacer 20x10x10	Spring washer	Washer		
3			0	0		
	Bolt M10x120	Spacer 20x10x10	Spring washer	Washer		
4			0	0		
	Bolt M10x1,25x30	Spring washer	Washer	Brace L=240		
5		0	0			
	Bolt M10x1,25x30	Spring washer	Washer			
6		G	0			
	Slider	Screw				
7		Ommo				
	Slider	Screw				
8		Ommo				