
(i) Crazy Iron


KTM 390 ADVENTURE ID 9007112/9007117

Complete set and assembly scheme:


Left side:

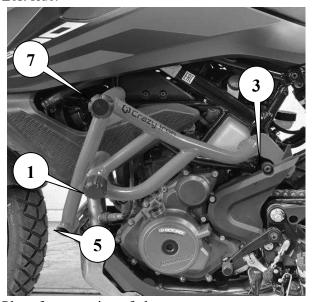


Place for mounting of plate:

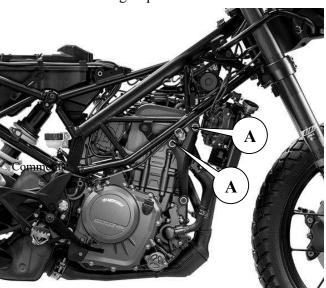

Right side:

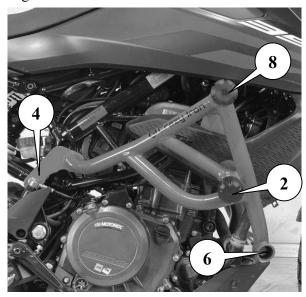

Fitting of plate

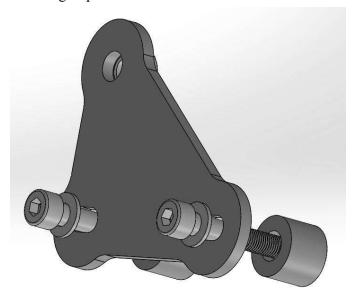

Comments:

NEVER LOOSEN ENGINE BOLTS FROM THE LEFT AND RIGHT SIDES AT THE SAME TIME!!!

- 1. Contact a specialized service, do not install the cage yourself!
- 2. Remove fairing elements if they can interfere the installation of Plate
- 3. Remove original bolt from points A on the right side and attach Plate to points A with bolts and spacers and fix.
- 4. Remove original bolt from points A on the left side and attach Plate to points A with bolts and spacers and fix.
- 5. Install fairing back.
- 6. Remove original bolts from point 4 on the right side of motorcycle.
- 7. Attach right side of cage to points 4 and 8 and fix with bolt M8x50 through spacer 16x10x20 in point 4 and with bolt M10x40 in point 8
- 8. Remove original bolts from point 3 on the right side of motorcycle.
- 9. Attach right side of cage to points 3 and 7 and fix with bolt M8x50 through spacer 16x10x20 in point 3 and with bolt M10x40 in point 7
- 10. Install between points No5 and No6 the brace (L= 245 mm) and fix it with Bolts M10x1,25x30
- 11. Tighten the fasteners according to the table.
- 12. Install sliders in points NoNo1,2,7,8 and fix them with screws, in case Damper cage use Damper sliders.

Tightening torques Nm						
	Connection type					
Thread	Steel	Aluminum				
M6	10	6				
M8	24	20				
M10	48	35				
M12	56	45				

Component table with according numbers in the photo:

№	•		Items			
	Slider	Screw				
1		Ommo				
	Slider	Screw				
2		Ommin				
	Bolt M8x50	Spacer 16x10x20	Spring washer	Washer		
3		0	0	0		
	Bolt M8x50	Spacer 16x10x20	Spring washer	Washer		
4			0	0		
	Bolt M10x1,25x30	Spring washer	Washer	Brace L=245		
5		G	0			
Bolt M1	Bolt M10x1,25x30	Spring washer	Washer			
		0	0			
Plate 7	Plate	Bolt M8x50	Spring washer	Spacer 20x10x17	Slider	Screw
		2	0			Omm
		Bolt M8x50	Spring washer	Spacer 20x10x17		
			0			
			Bolt M10x40			
	Plate	Bolt M8x60	Spring washer	Spacer 20x10x32	Slider	Screw
8			0			
		Bolt M8x60	Spring washer	Spacer 20x10x32		Omm
			0			
			Bolt M10x40			