


Crazy Iron

MV Agusta Brutale 800
ID: 70401012




Complete set and assembly scheme:

Left side:

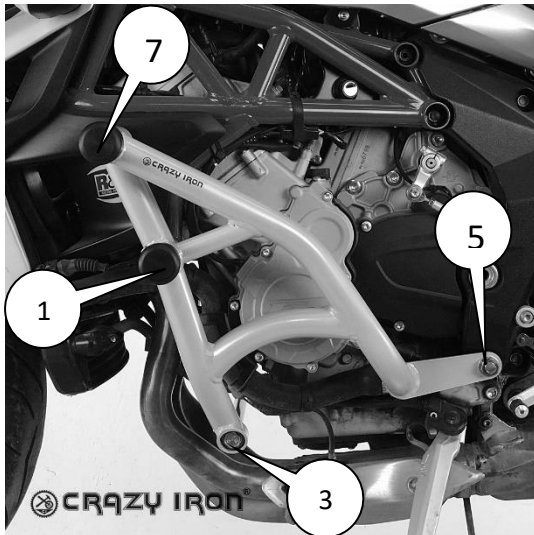

Right side:

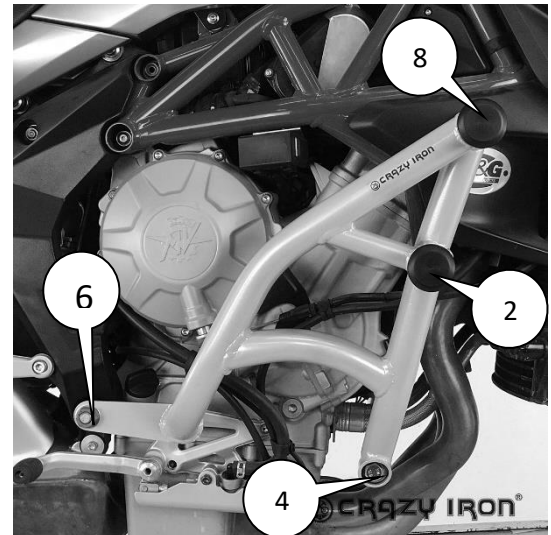

1. Rod M12x450 + Washer + Nut + Bolt M6x16 + Slider
2. Rod from p.1. + Washer + Nut + Bolt M6x16 + Slider
3. Bolt M10x1,25x30 + Washer + Spring washer + brace L=255
4. Bolt M10x1,25x30 + Washer + Spring washer + brace from p.3
5. Rod M12x350 + Washer + Nut + sleeve 20x12x64
6. Rod from p.5 + Washer + Nut + sleeve 20x12x56
7. Bolt M6x16 + Slider
8. Bolt M6x16 + Slider

Installing:

1. Remove original nuts in points No1 and No5
2. Lightly remove Bolts from points No1 and No5
3. Attach left side of cage to points No1 and No5 through the sleeve 20x12x64. Install rods from kit and shift original bolts using these rods.
4. Attach right side of cage to points No2 and No6 through the sleeve 20x12x56 and fix it with nuts.
5. Install brace between points No3 and No4 and tight lightly with Bolts M10x30
6. Tighten the fasteners according to the table:
7. Install Sliders in points NoNo1,2,7,8 and fix them with screws

Tightening torques Nm		
Thread	Connection type	
	Steel	Aluminum
M6	10	6
M8	24	20
M10	48	35
M12	56	45