





YAMAHA MT-09 TRACER 21'
ID: 3080812/3080817

Installing:

Left side:

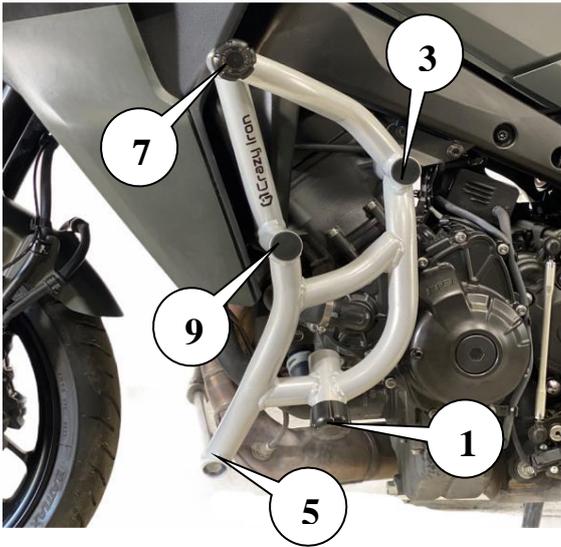

Right side:

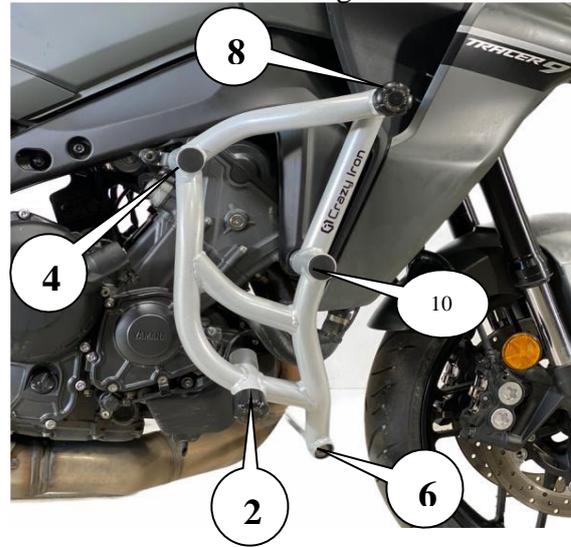

Comments:

1. Contact a specialized service, do not install the cage yourself!
2. Remove original bolts in points №10 and 4
3. Attach the right side of cage to motorcycle and screw lightly with Bolt M10x1,25x100 through spacer in point №10 and with Bolt M10x1,25x50 in point №4.
4. Remove original bolts in points №9 and №3
5. Attach left side of cage to motorcycle and screw lightly with Bolt M10x1,25x90 in point №9 and with Bolt M10x1,25x50 n point №3.
6. Install between points №5 and №6 brace L= 315 mm and fix with Bolts M10x1,25x30
7. Tighten the fasteners according to the table.
8. Install sliders in points №№1, 2, 7, 8 and fix them with screws M6x16
9. In points №3, 4, 9, 10 install decorative caps.
10. In case 3080817 use instead sliders in points №№7,8,9,10 Damper Sliders

Thread	Tightening torques Nm	
	Connection type	
	Steel	Aluminum
M6	10	6
M8	24	20
M10	48	35
M12	56	45

NEVER LOOSEN ENGINE BOLTS FROM THE LEFT AND RIGHT SIDES AT THE SAME TIME!!!

Component table with according numbers in the photo:

№	Items				
1	Slider	Screw			
					
2	Slider	Screw			
					
3	Bolt M10x1.25x50	Spring washer	Washer	Decorative cap	
					
4	Bolt M10x1.25x50	Spring washer	Washer	Decorative cap	
					
5	Bolt M10x1.25x30	Spring washer	Washer	Brace L=315	
					
6	Bolt M10x1.25x30	Spring washer	Washer		
					
7	Slider	Screw			
					
8	Slider	Screw			
					
9	Bolt M10x1.25x90	Spring washer	Washer	Decorative cap	
					
10	Spacer	Bolt M10x1.25x100	Spring washer	Washer	Decorative cap
					

