(i) Crazy Iron

ID: 3500212 Yamaha MT-03




Installing:







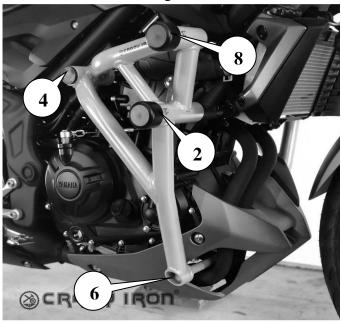

Comments:

Contact a specialized service, do not install the cage yourself! Tighten the fasteners according to the table.

Install sliders in points №№1,2,7,8 and fix them with screws, in case Damper cage use damper sliders.

NEVER LOOSEN ENGINE BOLTS FROM THE LEFT AND RIGHT SIDES AT THE SAME TIME!!!

Tightening torques Nm					
Thread	Connection type				
	Steel	Aluminum			
M6	10	6			
M8	24	20			
M10	48	35			
M12	56	45			

Componer	nt table with according	numbers in the photo:			5	
№		Items				
	Bolt M10x1.25x100	Spring washer	Washer	Slider	Screw	
1		0	0		Ommon	
	Bolt M10x1.25x100	Spring washer	Washer	Slider	Screw	
2		0	0		Ommo	
	Bolt M10x1.25x60	Spring washer	Washer	Decorative cap		
3		0	0			
	Bolt M10x1.25x60	Spring washer	Washer	Decorative cap		
4		0	0			
	Bolt M10x1,25x30	Spring washer	Washer	Brace L=295		
5		0	0			
	Bolt M10x1,25x30	Spring washer	Washer			
6		0	0			
7	Slider	Screw				
		Ommin				
	Slider	Screw				
8		Ommo				

O'